



INSTALLATION DATA

JOINING METHOD

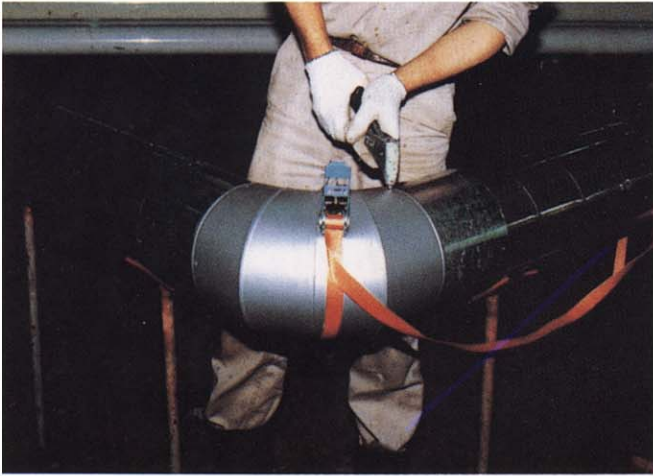

5. Secure fitting cover with steel or other compatible band and pop-rivet.

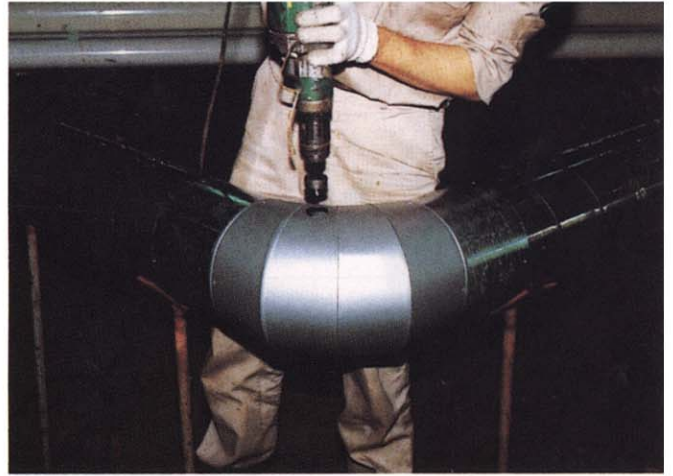

6. Open pour hole on fitting cover or sleeve in case of straight joints.



7. Pour required amount of part A (isocyanate) into measuring beaker. Pour required amount of part B (resin) into measuring cup.



8. Pour Part B into mixing container first, then add part A. Stir and mix thoroughly for 25 to 30 seconds, preferably with electric drill and agitator attachment.